

Instructions for S801+ Soft Starter, S801+T...,S801+U... and S801+V...

The Soft Starter features an electronic motor overload protection feature. This is intended to protect the motor and power wiring against overheating caused by excessive current for extended periods of time.

Note: Short circuit protection must be applied on the line side of this soft starter.

Trip current is programmed by entering the motor full load current rating using the "FLA Current Adjust" dial. It is programmable from 32% to 100% (.32-1 adjustment range of the unit's rated current).

Thermal memory is incorporated to accurately monitor motor operating temperature. Ambient temperature does not affect soft starter function within its operating limits.

Auto/Manual Reset

The Select auto or manual reset.

When a fault is present, the auto-reset will attempt to reset the fault every 2.5 seconds. If the fault flag(s) is cleared, the soft starter checks again in five seconds to make sure it stays clear. If it stays clear, the system resets the fault(s).

Note: The motor does NOT automatically restart after a fault is reset.

Notice/Avis.

Automatic reset is not intended for two-wire control devices.

Ce dispositif de reenclenchement automatique ne convient pas aux commandes a deux conducteurs.

12-pin terminal connection wiring capacity and torque requirements for the control wiring.

Table 1. Control Wiring

Wire Size	Number of Conductors	Torque Req.
22 - 14 AWG (0.33 - 2.5 mm ²)	2	3.5 Lb-in (0.4 N-m)
12 AWG (4.0 mm ²)	1	

Table 2. Control Circuit Fuseholder Kit

Catalog Number	Fuse Type
C320FBR	Class CC

Table 3. Short Circuit Rating


Soft Starter Catalog Number	Three-Phase Short Circuit Rating		
	240V	480V	600V
S801+T...	18 kA	18 kA	18 kA
S801+U...	30 kA	30 kA	30 kA
S801+V...	42 kA	42 kA	42 kA

Suitable for use in a circuit capable of delivering not more than 30,000 rms symmetrical amperes, 600 volts maximum when protected by Class L fuses or inverse time circuit breaker rated 600V, 1500 amperes, maximum.

Table 4. Overload - Adjustment Settings

Catalog Number	Current Range	Value of Adjustment Settings (Amps)			
		A	B	C	D
S801+T18...	56 - 180	56	97	138	180
S801+T24...	75 - 240	75	130	185	240
S801+T30...	95 - 304	95	164	233	304

Catalog Number	Current Range	Value of Adjustment Settings (Amps)			
		A	B	C	D
S801+U36...	120 - 360	112	194	276	360
S801+U42...	131 - 420	131	227	323	420
S801+U50...	156 - 500	156	270	384	500
S801+V36...	112 - 360	112	194	276	360
S801+V42...	131 - 420	131	227	323	420
S801+V50...	156 - 500	156	270	384	500
S801+V65...	203 - 650	203	352	501	650
S801+V72...	225 - 720	225	390	555	720
S801+V85...	265 - 850	265	460	655	850
S801+V10...	310 - 1000	310	540	770	1000

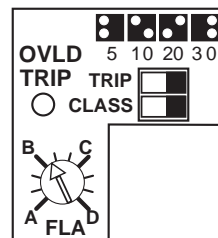

The overload trip class can be set to Class 5, 10, 20, or 30. The setting determines the time to trip, based on the severity of the overload condition. The trip class setting is made by moving the dip switches into the appropriate position to match the class overload desired. Ex: For a trip Class 5, both dip switches should be set to the left.

Find the motor FLA value on the table above. Set the FLA dial to the proper letter.

Note: Potentiometer is settable at any point in its full range.

Table 5. Line and Load Power Wiring

Lug Kit	Number of Conductors	Wire Sizes Cu 75°C Only	Torque Req.	Number of Kits Req'd
---------	----------------------	-------------------------	-------------	----------------------

S801+T..., S801+U...

EML22	2	4 - 1/0 MCM (21.2 - 53.5 mm ²)	250 Lb-in (28.3 N-m)	2
EML23 EML24	1 2	4/0 - 500 MCM (107 - 240 mm ²)	250 Lb-in (28.3 N-m)	
EML25 EML26	1 2	2/0 - 300 MCM (70 - 150 mm ²)	225 Lb-in (25.5 N-m)	

S801+V...

EML28 EML30 EML32	2 4 6	4/0 - 500 MCM (107 - 240 mm ²)	250 Lb-in (28.3 N-m)	2
EML33	4			

① Requires special lug cover. Check with Eaton for availability.

Table 6. MOV Kits Options

Catalog Number	Description
EMS39	600V (max) MOV for S801+... Soft Starters
EMS41	690V (max) MOV for S801+... Soft Starters

Note: LOAD WIRES MUST BE 75° C STRANDED COPPER CONDUCTORS ONLY WHEN USING THE PROTECTIVE MODULE [EMS39]

Table 7. 24V Power Supply Kits

Catalog Number	Steady State Wattage	Inrush Wattage	Input Voltage
PSG240E	240W	360W	85 - 264 VAC
PSG240F	240W	360W	320 - 575 VAC

Eaton Corporation
Electrical Sector
1111 Superior Ave.
Cleveland, OH 44114
United States
877-ETN-CARE (877-386-2273)
Eaton.com

© 2012 Eaton Corporation
All Rights Reserved
Publication No. IL03900004E / 001
April 2012